

## GT200-HT-DP HART/PROFIBUS DP Gateway

### Product Overview


GT200-HT-DP is a gateway that can provide a seamless connection between HART and PROFIBUS DP. At HART side it can be configured as a primary master or the secondary master, and acts as slave at the PROFIBUS DP side.

### Technical specifications

- [1] Used as a primary master or a secondary HART master;
- [2] Support one HART channel, support connecting at most 13 instruments with gateway internal resistor and support connecting 15 instruments with an external resistor (250Ω);
- [3] HART side support single-point and multi-point mode, under single-point mode, support data burst operation;
- [4] Each HART command can be configured for change-of-state output, polling output, initialization output or disable output;
- [5] Each channel of HART supports up to 128 user commands, the output data buffer area can be up to 1000 bytes, and the input data buffer area up to 1600 bytes;
- [6] Supports PROFIBUS DP V0, adaptive baud rate on PROFIBUS DP (9600 bps~12Mbps);
- [7] Operating temperature: -4 ° F to 140 ° F(-20°C~60°C), relative humidity 5% ~ 95% (non condensing);
- [8] Power: 24VDC (9V~30V), <100mA (24VDC);
- [9] External Dimensions (W\*H\*D): 1.6in\*4.9in\*4.3in (40mm\*125mm \*110mm);

### Power interface

Power interface is shown as below:

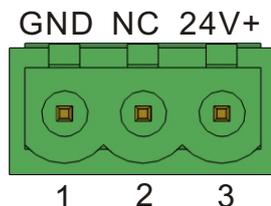


Pin	Function
1	Power GND
2	NC(Not Connected)
3	24V+, DC Positive 24V

### Features

- Powerful Serial function: Support the interconnection between HART and Modbus , also support transparent transmission between HART and serial port;
- Multi debugging functions: It can display the exchanging data, and diagnosis the HART command;
- Provide easy-to-use configuration software SST-HT-CFG.

### HART interface


HART interface is shown as below:

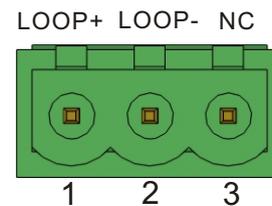

Pin	Function
1	HART LOOP+, Connect HART signal negative
2	HART LOOP-, Connect 24V power negative
3	NC, Not Connected


### RS-485/RS-422 interface

The RS-485 interface of GT200-HT-RS is a standard one, and the RS-485 characteristics of the product are shown as follows:

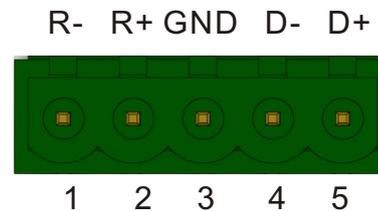

Pin	Function
1	R-, RS-422 Receive Negative
2	R+, RS-422 Receive Positive
3	GND
4	D-, RS-485/RS-422 Transmit Negative
5	D+, RS-485/RS-422 Transmit Positive


**Appearance**

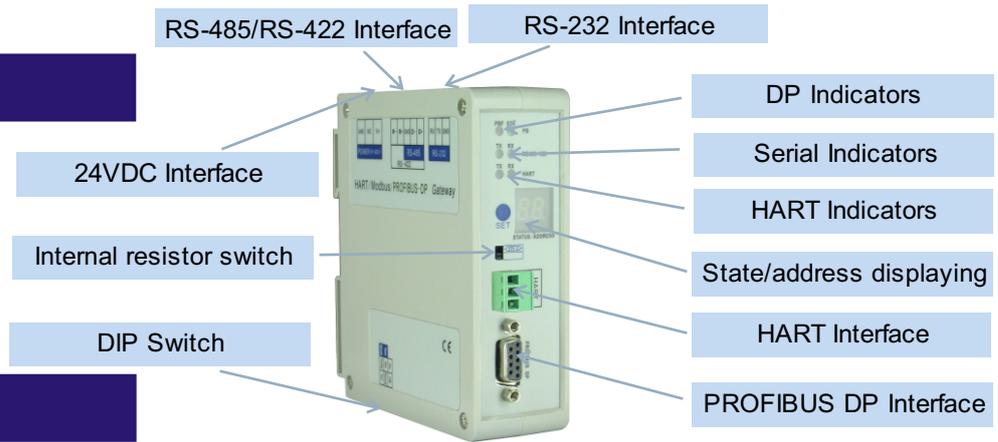

**Indicators**

Indicators	State	State Description
PBF	Always Red	PROFIBUS DP communication fails
	OFF	Communication is ok
STA	Green Blinking	PROFIBUS DP bus data is communicating
	OFF	No data communication
TX	Blinking	Bus data is sending
	OFF	No data is sending
RX	Blinking	Bus data is receiving
	OFF	No data is receiving

**Configuration switch**

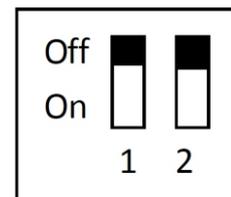

The DIP switch is located at the bottom of the gateway, bit 1 is debugging bit and bit 2 is configuration bit.

Debugging (bit 1)	Configuration (bit 2)	Description
Off	Off	Run Mode
Off	On	Configuration Mode
On	Off	Debug Mode
On	On	Configuration Mode

**Notes:**

Restart GT200-HT-DP (power off and power on) after resetting the configuration to make the configuration take effect!